

All measurements are referenced from the center of the rotating arm assemblies.


A total of 14 holes need to be drilled in the floor to mount the turnstile (4 for the fixed arms, 2 for the rotating arm bearing and 8 for the cage assemblies).

Hint: You can lay the top channel on the ground where you want the turnstile, then use a magic marker to trace 10 of the 14 hole locations. The last 4 can either be measured or the cage assembly can be used as a template.

Aerial View



Overall Length 96"
Overall Width 55"
Overall Height 89"

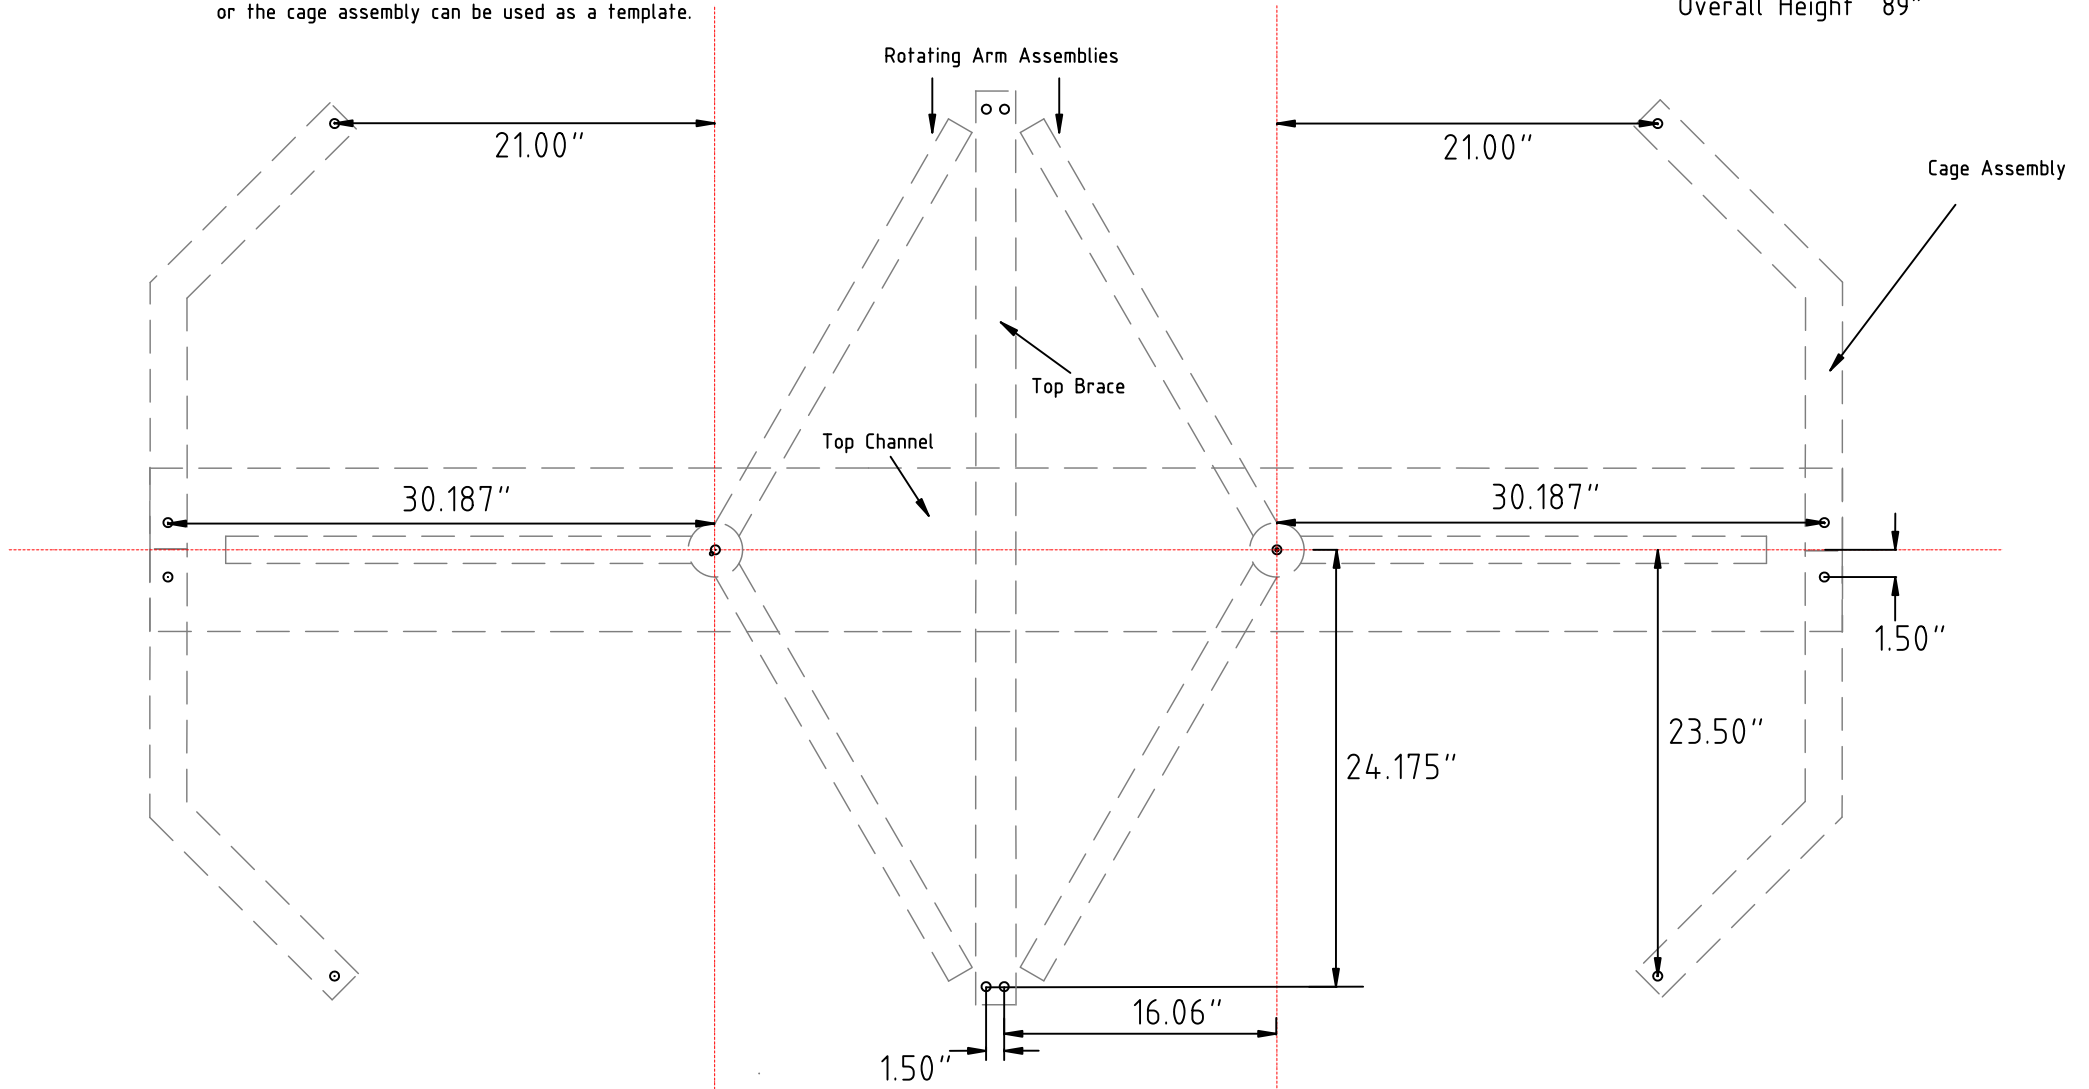

HT431T Tandem Hole Locations